

Table of Contents

 
INTRODUCTION

Welcome

Dimmer Equipment Connection

Connecting the MC 7000 Series Lighting Console to Leviton-NSI dimming equipment is very simple.

- 6. Mode Button:** This button sequences the console through the 3 operating modes. The lit LED indicates the current mode.
- 7. Tap Sync:** Repeatedly tapping this button establishes the chase rate.
- 8. Chase 1:** This button toggles Chase 1 on and off, indicated by the LED.
- 9. Chase 2:** This button toggles Chase 2 on and off, indicated by the LED.
- 10. X Crossfader:** This slide control is used to proportionally vary the intensity of Scene X.
- 11. Y Crossfader:** This slide control is used to proportionally vary the intensity of Scene Y.
- 12. Master:** This slide control is used to proportionally vary the overall console intensities to stage except those from the Bump buttons.



Bump Buttons

PROGRAMMING CONTROL FUNCTIONS



